

1.	C07002	Start Relay
2.	C07003	Overload
3.	C07005	Start Capacitor
4.	RO1119	Operating Instructions
5.	RO3059	3-Row Recovery Coil
6.	RO3071	Handle
7.	RO3004A	Suction Pressure Regulator
8.	RO3010	3/8" Check Valve
9.	RO3015	Teflon Seal – Compressor Sight Glass
10.	RO3017	Compressor Sight Glass
11.	RO3063	High Side Pressure Gauge
12.	RO3062	Low Side Pressure Gauge
13.	RO4084	Condenser Housing
14.	RO4090	Chassis (Bottom)
15.	RO4092	Front Panel
16.	RO4091	Cover (Top)
17.	RO3068	Grille – 12" X 0.051
18.	RO6013	Legs
19.	RO7007	High Pressure Switch
20.	RO7008P	Compressor with Sight Glass
21.	RO7140	Fan Motor
22.	RO7146	SPST Power Switch
23.	RO5040	Pump-Out Valve
24.	RO7149	Power Cord
25.	RO3064	Inlet Valve
26.	RO3065	Outlet Valve
27.	RO3060	Outer Casing - Front
28.	RO3061	Outer Casing - Rear
29.	RO7009	Relay – Pump-Out
30.	RO7010	Cord to Float
31.	RO7012	Amber Light

**Note: Please provide model no. and serial no. when ordering spare parts.**